


Bed Assembly

Step 1

Attach the side rails to the head and footboard. Insert the 1/2" alignment pins into the ends of the side rails. Follow the assembly instructions provided within the pre-bagged hardware kit containing the threaded studs, nuts, curved washer, and wrench.



Nut, Curved Washer
Alignment Pins, Threaded Stud,

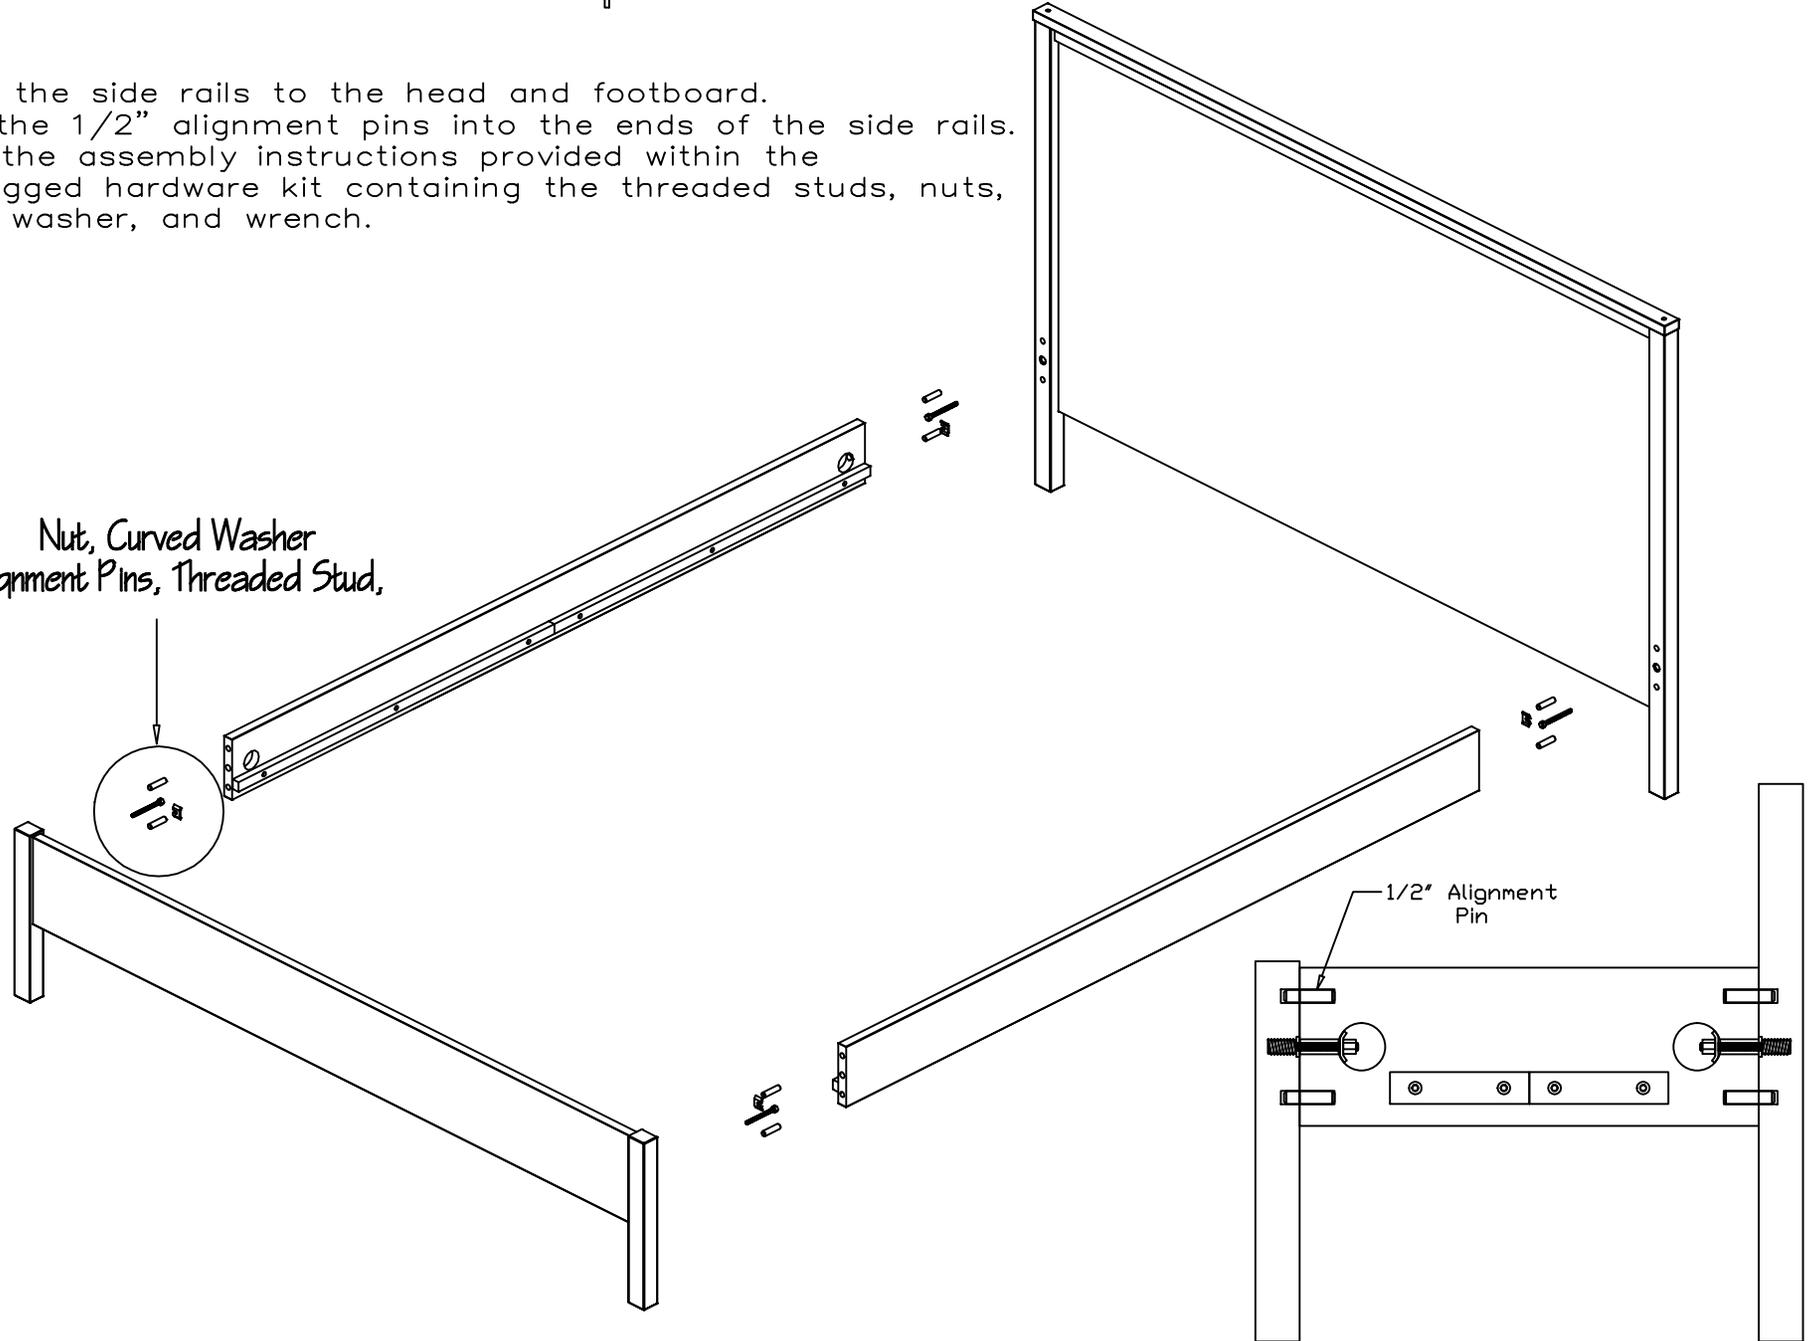

Bed Assembly

Step2

Install the prop nuts into the bed bottoms by tapping gently with a hammer.

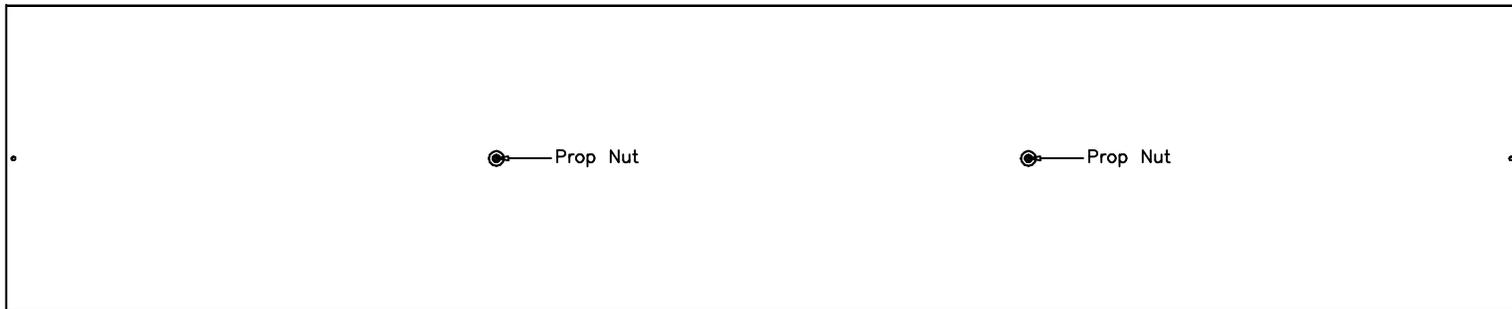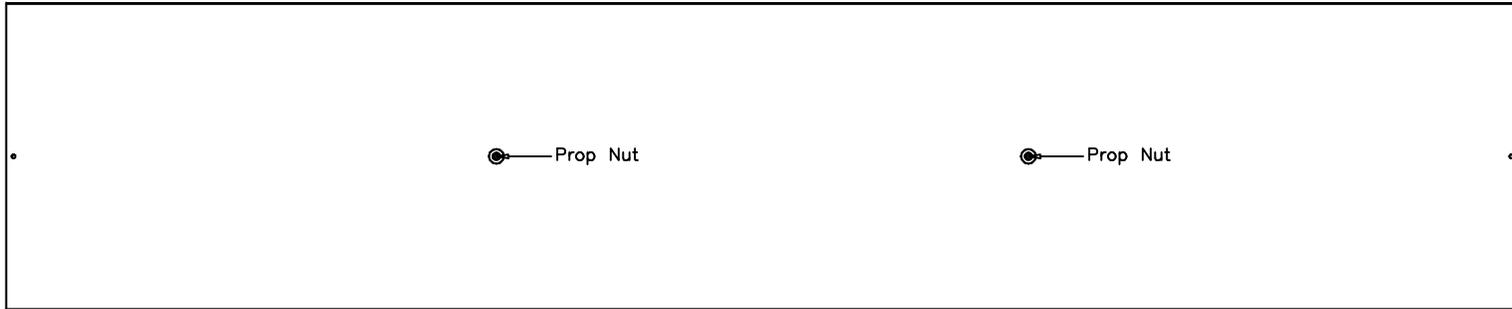

Bed Assembly

Step 3

Lay the outer two bed bottoms in place.



An extra person to help with the next step would be a great idea.

Place the support rails on the bottom side of the bed bottom. Align the hole in the support rail with the prop nut in the bed bottom.


Thread the support legs through the holes in the support rail and into the prop nuts in the bed bottoms.

Install the center bed bottom the same way as the ends.


Place the two remaining bottom panels in place and attach all the bottom panels to the side rails and the center support with 1" flat head screws

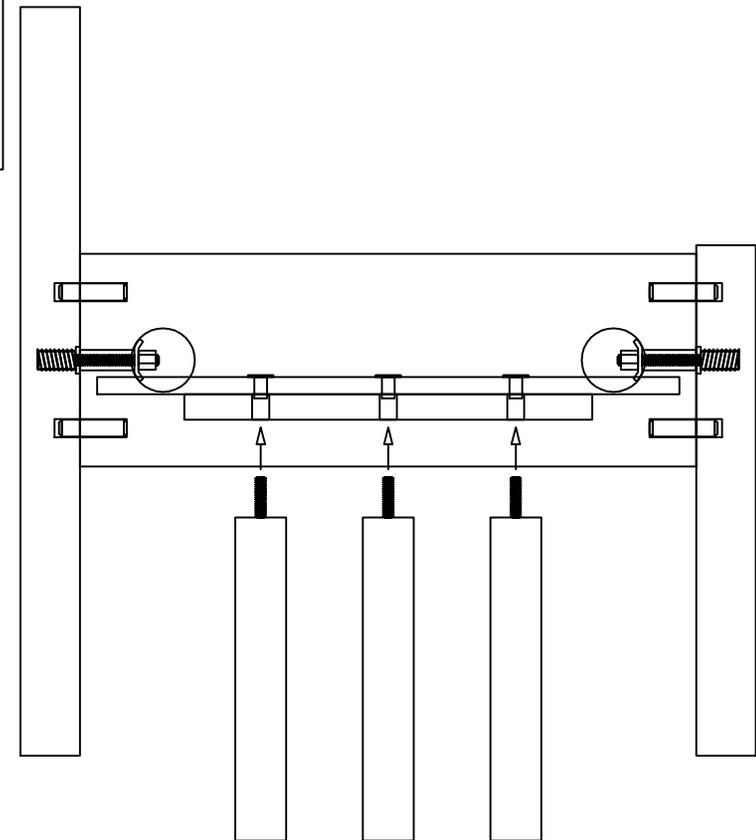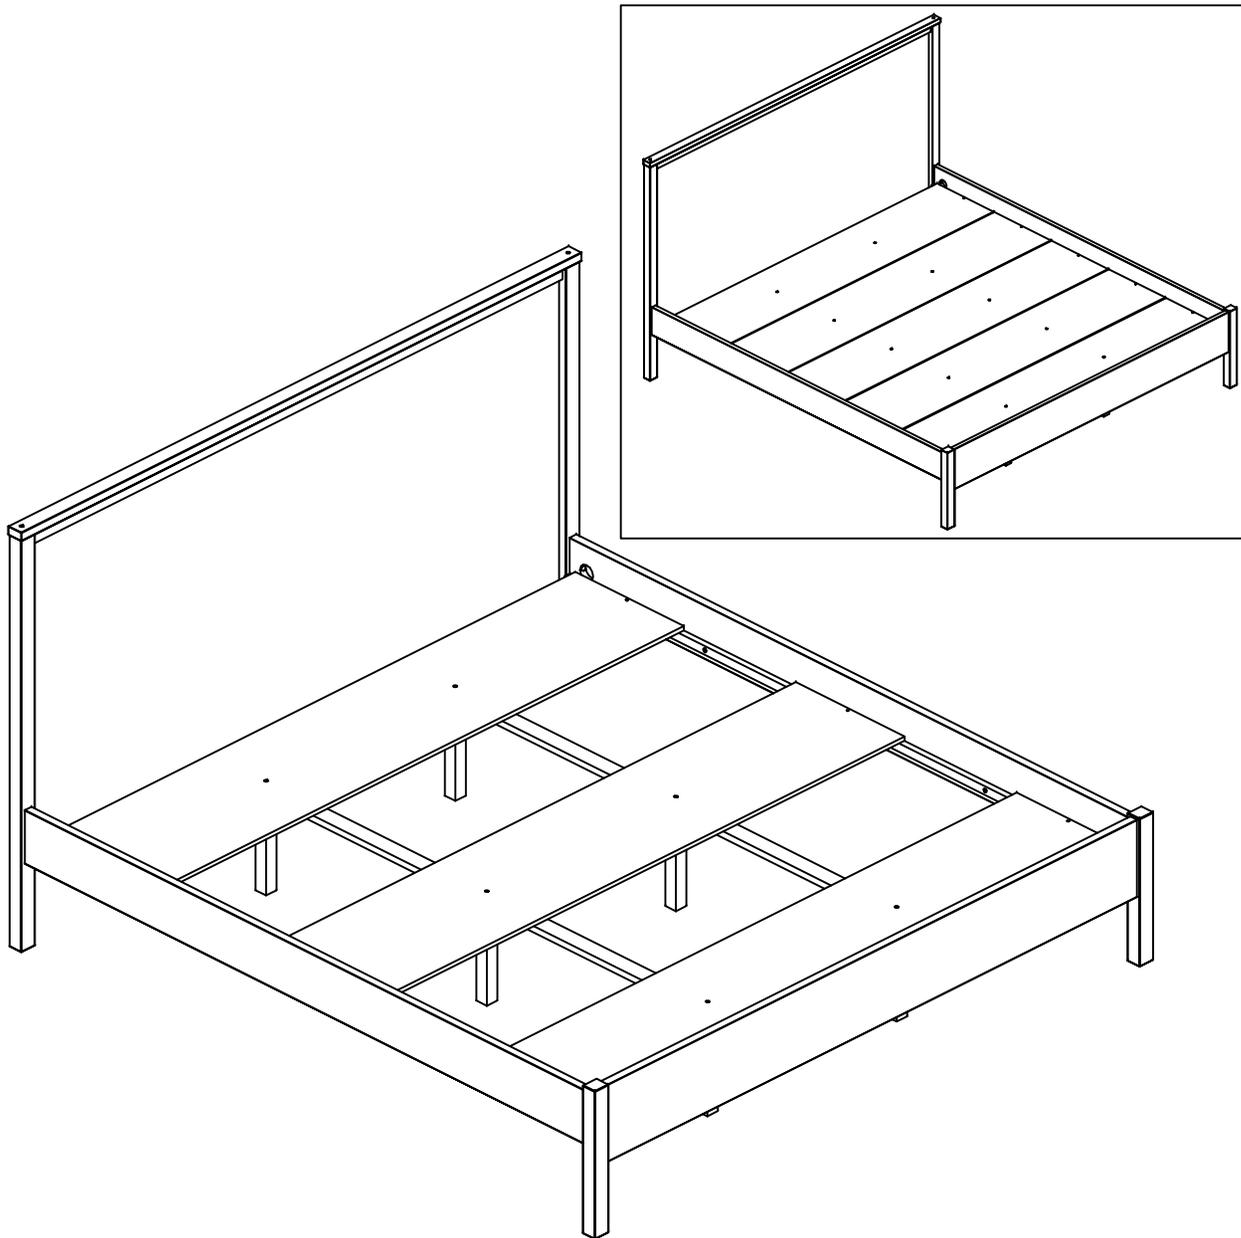


Hardware List




1" Flat Head Screw




1/2" Alignment Pin



Threaded Stud

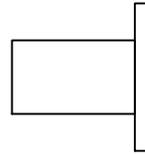


Prop Nut

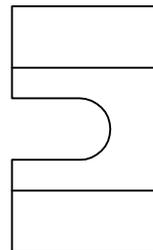

Curved Washer



Hex Nut

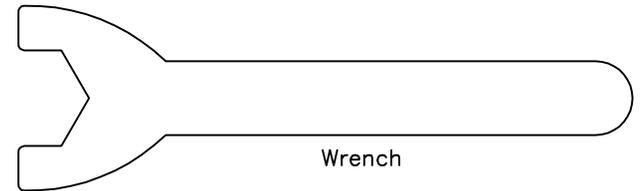

Wrench